

International Patent Public No.: WO 2006/007772 China Patent No.: ZL02220153.X, ZL200420078956.5 US Patent No.: 7549446 India Patent No.: 232582 Russia Patent No.: 2349819 South Korea Patent No.: 10-0914137 Mexico Patent No.: 268581 Australia Patent No.: 2005263257

Hotline: +84 98 228 3389

Website: https://locnuoccuulong.com/

Philippine Patent No.: 1-2006-502553 Taiwan Patent No.: M287896

Multi-functional Flow Control Valve for Water Treatment Systems

63510 (Old Model: N74A1) 63610 (Old Model: N74A3) 63510B (Old Model: F74B1) 63610B (Old Model: F74B3)



Instruction Manual





Please read this manual in details before using the valve and keep it properly in order to consult in the future. 0WRX.466.510

Before the valve put into use, please fill in the below content so as to help us to refer in the future.

Softener :	System	Confi	guration
------------	--------	-------	----------

Talk Size: Diamini, Heightmini;
Resin VolumeL; Brine Tank CapacityL;
Hardness of Raw watermmol/L;
Pressure of Inlet WaterMPa;
Control Valve Model; Number;
The Specification of Drain Line Flow Control;
Injector No
Water Source: Ground-water□ Filtered Ground-water □ Tap Water□ Other

Parameter Set

Parameter	Unit	Factory Default	Actual Value
Control Mode A-01 (02, 03, 04)	/	A-01	
Water Treatment Capacity (Meter Type)	m³	80	
Service Days (Time Clock Type by Days)	D.	03	
Service Hours (Time Clock Type by Hours)	H.	20	
Regeneration Time	/	02:00	
Backwash Time	min.	10	
Brine & Slow Rinse Time	min.	60	
Brine Refill Time	min.	05	
Fast Rinse Time	min.	10	
Interval Regeneration Days	D.	30	
Output Mode b-01 (02)	/	b-01	

If there is no special requirement when product purchase, we choose 3# drain line flow control and 3# injector.



Catalogue

Notice	3
1.Product Overview	4
1.I.Main Application & Applicability	4
1.2.Product Characteristics	4
1.3.Service Condition.	6
1.4.Product Structure and Technical Parameters	7
1.5.Installation.	8
2.Basic Setting & Usage	11
2.1.The Function of PC Board	11
2.2.Basic Setting & Usage	13
3.Application	16
3.1.Softener Flow Chart	16
3.2.The Function and Connection of PC Board	18
A.Signal Output	19
B.Interlock	22
C.Pressure Relief Output	22
D.Remote Handling Input	23
E. Interlock System	23
F. Series System	23
3.3.System Configuration and Flow Rate Curve	24
3.4.Parameter Settlement	26
3.5.Parameter Enquiry and Setting	27
3.6.Trial Running	32
3.7.Trouble-Shooting	33
3.8.Spare Part and Part No	
4. Warranty Card	41



Notice

- To ensure normal operation of the valve, please consult with professional installation or repairing personnel before use it.
- If there are any of pipeline engineering and electric works, there must be finished by professional at the time of installation.
- Do not use the control valve with the water that is unsafe or unknown quality.
- Depending on the changing of working environment and water requirement, each parameter of softener should be adjusted accordingly.
- When the water treatment capacity is too low, please check the resin. If the reason is shortage of resin, please add; if the resin is turn to reddish brown or broken, please replace.
- Test water periodically to verify that system is performing satisfactorily.
- Sodium used in the water softening process should be considered as part your overall dietary salt intake. Contact doctor if you are on a low sodium diet.
- Ensure that there is solid salt all the time in the brine tank in the course of using, when this valve is used for softening. The brine tank should be added the clean water softening salts only, at least 99.5% pure, forbidding use the fine salt.
- Do not put the valve near the hot resource, high humidity, corrosive, intense magnetic field or intense librations environment. And do not leave it outside.
- Forbidden to carry the injector body. Avoid using injector body as support to carry the system.
- Forbidden to use the brine tube or other connectors as support to carry the system.
- ◆Please use this product under the water temperature between 5~50°C, water pressure 0.2~0.6MPa. Failure to use this product under such conditions voids the warranty.
- If the water pressure exceeds 0.6Mpa, a pressure reducing valve must be installed before the water inlet. While, if the water pressure under 0.2MPa, a booster pump must be installed before the water inlet.
- Do not let children touch or play, because carelessness operating may cause the procedure changed.
- When the attached cables of this product and transformer are changed, they must be changed to the one that is from our factory.
- ◆Advice to use M88*2 male thread distributor for top-mounted valve to make convenience for disassembly.

locnuoccuulonQ

1. Product Overview

1. 1. Main Application & Applicability

Used for softening or demineralization water treatment systems.

Be suitable for residential softening system.

Ion exchange equipment

Boiler softening water system

RO pretreatment softening system, etc.

1.2. Product Characteristics

Simple structure and reliable sealing

It adopts hermetic head faces with high degree pottery and corrosion resistance for opening and closing. It combines with Service, Backwash, Brine & Slow Rinse, Brine Refill and Fast Rinse.

Variety of installation methods

Use side connector can change F74B from top mounted to side mounted, and display board is removable.

- No water passes the valve in regeneration in single tank type.
- Manual function

Realize regeneration immediately by pushing manual button at any time.

Long outage indicator

If outage overrides 3 days, the time of day indicator "12:12" will flash to remind people to reset new time of day. The parameters no need to be reset for all the parameters are kept as before.

◆LED dynamic screen display

The stripe on dynamic screen flash, it indicates the control valve is in service; otherwise, it is in regeneration cycle.

Buttons lock

No operations to buttons within 1 minute, button lock indicator light on which represent buttons are locked. Before operation press and hold the and buttons for 5 seconds to unlock. This function can avoid incorrect operation.

It can choose time clock type or meter type by program selection.

Can realize interchange between time clock type by days or by hours and meter type by dialing a switch on main control board. (Check figure on P18) (Attention: After dialing the switch, it needs to reconnect the power. The meter type product has one flow meter and flow meter cable, but the time clock type doesn't have.)

• Four kinds of meter type can be selected (Suite for N74A3, F74B3)


Mode	Name	Instruction
A-01	Meter delayed regeneration	Regenerate on the day although the available volume of treated water drops to zero (0). Regeneration starts at the regeneration time.
A-02	Meter immediate regeneration	Regenerate immediately when the available volume of treated water drops to $zero(0)$.
A-03	Intelligent meter delayed regeneration	Meter delayed regeneration type, but by setting resin volume, feed water hardness, regeneration factor, the controller will calculate the system capacity.
A-04	Intelligent meter immediate regeneration	Meter immediate regeneration type, but by setting resin volume, feed water hardness, regeneration factor, the controller will calculate the system capacity.

Interlock Function

It has a function of interlock to realize only one valve in regeneration but the other valves are in service while several valves parallel series in system. In multi-steps treatment systems such as RO pre-treatment, when several valves are in series, there is only one valve in regeneration or washing to ensure pass water all the times while different valves in regeneration or washing.(Application refer to Figure 3-9)

Signal output

There is a signal output connector on main control board. It is for controlling external wiring (Refer to Figure from Figure 3-1 to Figure 3-8). There are two kinds of output modes. b-01 Mode: Turn on start of regeneration and shut off end of regeneration; b-02 Mode: Signal available only intervals of regeneration cycles and In service.

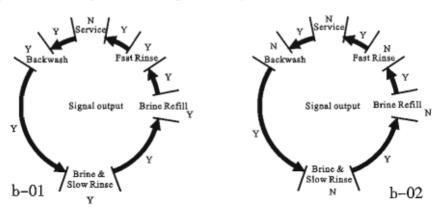

Remote handling input

This connector can receive external signal, used together with PLC, and computer etc. to control the valve. (Application refer to Figure 3-11)

Pressure relief output

The valve will cut off feeding water to drain line when it switches in regeneration cycles (Same as signal output b-02). Thus in some water treatment system, e.g. Deep Well, one booster pump was installed on the inlet to increase the system water feeding pressure, this cut-off will cause pressure on inlet rising too fast to damage the valve. Pressure Relief Output can be used to avoid this problem. (Application refer to Figure 3-10)

Maximum interval regeneration days

Under the situation of service reaching the setting days and the volume not yet, it could enter into regeneration process forcibly when current time is the same as regeneration time.

All parameters can be modified

According to the water quality and usage, the parameters in the process can be adjusted.

1.3. Service Condition

Runxin Valve should be used under the below conditions:


	Items	Requirement	
Working	Water pressure	0.2MPa ~ 0.6MPa	
conditions	Water temperature	5℃~50℃	
	Environment temperature	5℃~50℃	
Working environment	Relative humidity	≤95% (25℃)	
02.11011110111	Electrical facility	AC100 ~ 240V/50 ~ 60Hz	
Inlet water quality	Water turbidity	<5FTU	
	Water hardness	First Grade Na [†] <6.5mmol/L; Second Grade Na [†] <10mmol/L	
	Free chlorine	<0.1mg/L	
	Iron2*	<0.3mg/L	
	CODMn	<2mg/L (O ₂)	

In the above table, First Grade Na* represents First Grade Na* Exchanger. Second Grade Na* represents Second Grade Na* Exchanger.


- When the water turbidity exceeds the conditions, a filter should be installed on the inlet of control valve.
- When the water hardness exceeds the conditions, the outlet water hardness will hardly-reach the requirement of boiler feed water (0.03 mmol/L). It is suggested to adopt second grade softener.


1.4. Product dimension and parameter

A. Product dimension (The appearance is just for reference. It is subject to the real product.)

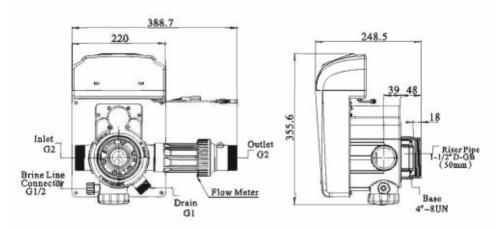

Structure Chart of N74A3 (63610)

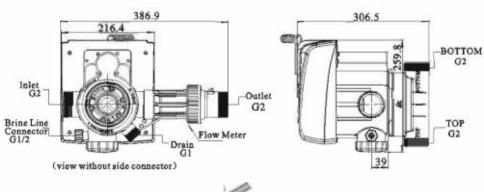

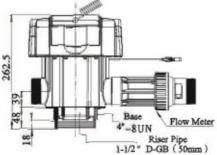

(view without side connector)

Structure Chart of F74B3 (63610B)

B. Technical Parameters

Model	Transformer Output	Flow Rate m³/h @0.3MPa	Regeneration Type	Installation Type	
N74A1 (63510)	DC24V, 1.5A	10	Time clock type by days	Top-mounted	
N74A3 (63610)	DC244, 1.5A		Meter type		
F74B1 (63510B)	DC24V, 1.5A	10	Time clock type by days	Top-mounted or side- mounted	
F74B3 (63610B)	DC241, 1.3A	10	Meter type		

1.5. Installation

A. Installation notice

Before installation, read all those instructions completely. Then obtain all materials and tools needed for installation.

The installation of product, pipes and circuits, should be accomplished by professional to ensure the product can operate normally.

Perform installation according to the relative pipeline regulations and the specification of Water Inlet, Water Outlet, Drain Outlet, Brine Line Connector.

B. Device location

- 1) The softener should be located close to drain.
- ②Ensure the unit is installed in enough space for operating and maintenance.
- ③Brine tank need to be close to softener.
- The unit should be kept away the heater, and not be exposed outdoor. Sunshine or rain will cause the system damage.
- ⑤Please avoid to install the system in one Acid/Alkaline, Magnetic or strong vibration circumstance, because above factors will cause the system disorder.
- ⑥Do not install the filter or softener, drain pipeline in circumstance which temperature may drop below 5°C, or above 50°C.
- One place is recommended to install the system which cause the minimum loss in case of water leaking.
- C. Pipeline installation (Take N74A3 as an example)
- ①Install control valve
- a. As the Figure 1-I shows, select the riser pipe with 50 mm OD, glue the riser pipe to the bottom strainer and put it into the mineral tank, cut off the exceeding tube out of tank top opening. Plug the riser tube in case of mineral entering.
- b. Fill the resin to the tank, and the height is accordance with the design code.
- c. Screw top strainer connector to valve body with five pieces of screws.

- d. Screw the top distributor to the valve.
- Insert the riser tube into control valve and screw tight control valve.

Note:

- ■The length of riser tube should be neither higher 2mm nor lower 5mm tank top opening height, and its top end should be rounded to avoid damage of O-ring inside the valve.
- Avoid floccules substance together with resin to fill in the mineral tank.
- Avoid O-ring inside control valve falling out while rotating it on the tank.


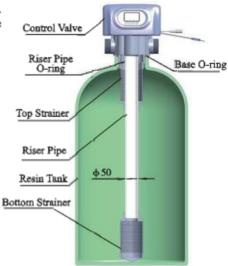


Figure 1-1

2 Install flow meter

As Figure 1-2 shows, put the sealing ring into nut of flow meter, screw in water outlet; insert the sensor into flow meter.

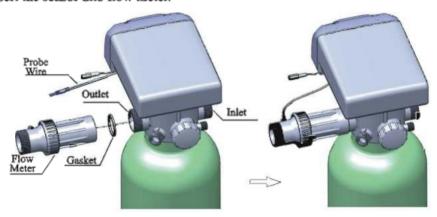

③Pipeline connection

Figure 1-2

- a. Install a pressure gauge in water inlet as figure 1-3.
- b. Install valve A, B, C, D in inlet, outlet, inlet pipeline and outlet pipeline. Valve D is sampling valve.
- c. Install a check valve on outlet pipe.
- d. Inlet pipeline should be in parallel with outlet pipeline. Support inlet and outlet pipeline with fixed holder.

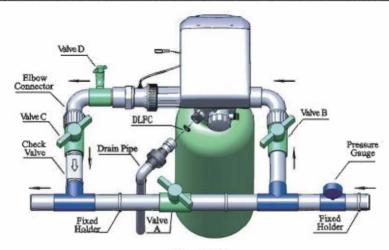


Figure 1-3

Note:

- If the water outlet or water tank is installed higher than control valve or parallel interlock system with multi-outlets, a liquid level controller must be installed in brine tank. Or else, the water in water outlet or water tank will flow backwards into brine tank when backwash.
- If making a soldered copper installation do all sweat soldering before connecting pipes to the valve. Torch heat will damage plastic parts.
- •When turning threaded pipe fittings onto plastic fitting, use care not to cross thread or broken valve.
- If the valve belongs to time clock type (N74A1 or F74B1), there are no step ②. ④Install drain pipeline

Insert drain line flow control into drain outlet, use UPVC glue to connect drain outlet with UPVC drain pipeline as Figure 1-4 shows.

Note:

- Control valve should be higher than drain outlet, and be better not far from the drain hose.
- •Be sure not connect drain with sewer, and leave a certain space between them, avoid wastewater be absorbing to the water treatment equipment, such as showed in the Figure 1-4.



Figure 1-4

Connect brine tube

- a. As Figure 1-5 shows, slide 1/2" brine tube hose connector over end of brine tube.
- Insert tube bushing into the end of brine tube.
- Tighten brine draw hose connector onto brine line connector.
- d. Connect the other end of brine tube with the brine tank. (The liquid level controller and air-blocker should be installed in the brine tank.)


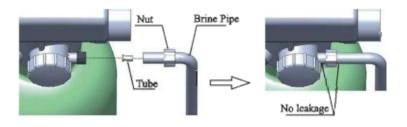


Figure 1-5

Remark: The brine tube and drain pipeline should not be bended or plugged.

2. Basic Setting & Usage

2.1 The Function of PC Board

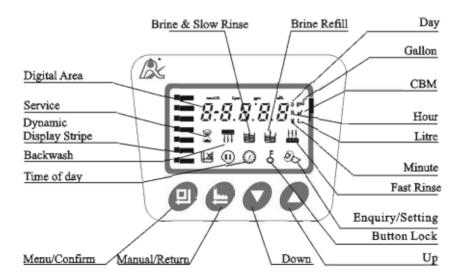

Dight flash, remind you to reset the time of day if electrical service interrupted 3 days more (If electrical service interrupted within 3 days, it doesn't need to reset the time.)

• & Light on, indicate the buttons are locked. At this moment, press any single button will not work (No operation in one minute, & will light on and lock the buttons.)

A. Time of day indicator

B. & Button lock indicator

Dight on, display the time of day.

● Solution: Press and hold both and for 5 seconds until the light off.
C. Program mode indicator
● Light on, enter program display mode. Use O or O to view all values.
● Flash enter program set mode. Press O or O to adjust values.
D. Manu/Confirm button
● Press ② , ② light on, enter program display mode and use Ø or Ø to view all
values.
● In program display mode, press 📵 , 🗞 flash, enter program set mode, press 🗷 or
and adjust values.
● Press ② after all program are set, and then the voice "Di" means all setting are
success and return program display mode.
E. D Manual/Return button
• Press 🕒 in any status, it can proceed to next step. (Example: Press 🕒 in Service
status, it will start regeneration cycles instantly; Press 📵 while it is in Backwash status,
it will end backwash and go to Brine &Slow Rinse at once.)
 Press in program display mode, and it will return in Service; Press in program
set mode, and it will return program display mode.
 Press while adjusting the value, then it will return program display mode directly
without saving value.
F. Down 🕖 and 🕡 Up
 In program display mode, press or to view all values.
◆ In program set mode, press Ø or Ø to adjust values.
Press and hold both and for 5 seconds to lift the Button Lock status.

2.2. Basic Setting & Usage

A. Parameter specification

Function	Indi- cator	Factory Default	Parameter Set Range	Instruction	
Time of Day	0	Random	00: 00 ~ 23:59	Set the time of day when use; ": " flash.	
			A-01	Meter Delayed: Regenerate on the day although the available volume of treated water drops to zero (0). Regeneration starts at the regeneration time.	
			A-02	Meter Immediate: Regenerate immediately when the available volume of treated water drops to zero (0).	
Control Mode	A-01	A-01	A-03	Intelligent Meter Delayed: Meter Delayed Regeneration type, but by setting Resin Volume, Feed Water Hardness, Regeneration Factor, the controller will calculate the System Capacity.	
		A-04	Intelligent Meter Immediate: Meter Immediatel Regeneration Type, but by setting Resin Volum Feed Water Hardness, Regeneration Factor, the controller will calculate the System Capacity		
Service Day	\$	1-03D.	0∼99 days	Only for Time Clock Type, regeneration by days	
Service Hour	Z	1-20H.	0∼99 hours	Only for Time Clock Type, regeneration by hours	
Regeneration Time	02:00	02:00	00: 00~23:59	Regeneration time; ":" light on	
Resin Volume	50L	50L	20 ~ 500L	Resin volume in brine tank (L)	
Feed Water Hardness	Yd1.2	1.2	0.1 ~ 9.9	Feed water hardness (mmol/L)	
Exchange Factor	AL.65	0.65	0.30 ~ 0.99	Relate to the raw water hardness. When hardness is higher, the factor is smaller.	
Water Treatment Capacity	\$	80m³	0 ~ 999.9m³	Water treatment capacity in one circle (m ³)	
Backwash Time	111	10min.	0 ~ 99	Backwash time(Minute)	
Brine & Slow Rinse Time	鲥	60min.	0 ~ 99	Brine &Slow rinse time(Minute)	
Brine Refill Time	B	5min.	0 ~ 99	Brine refill time(Minute)	

Fast Rinse Time	#11	10min.	0 ~ 99	Fast rinse time(Minute)	
Maximum Interval Regeneration Days	H-30	30	0 ~ 40	Regenerate on the day even through the available volume of treated water does not drop to zero (0).	
Output Control Mode	b-01	01	01 or 02	b-01: Signal turn on start of regeneration and shut off end of regeneration. (Refer to P5) b-02: Signal available only intervals of regeneration cycles and in service. (Refer to P5)	

B. Process Display

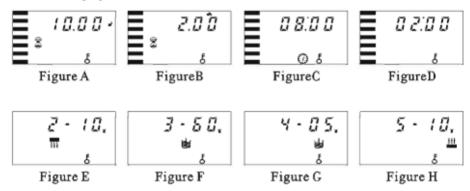


Illustration:

- ●In Service status, the figure shows A/B/C/D; In Backwash status, it shows figure E/C; In Brine& Slow Rinse status, it shows F/C; In Brine Refill status, it shows figure G/C; In Fast Rinse status, it shows figure H/C. In each status, every figure shows 15 seconds.
- ■Above displays are taking the Meter Type for example. For the Time Clock Type, it shows the rest days or hours, such as 1-03D or 1-10H.
- The display screen will only show "-00-" when the electrical motor is running.
- The time of day figure "-00-" flash continuously, such as "12: 12" flash, indicates long outage of power. It reminds to reset the time of day.
- ●The display will show the error code, such as "-E1-" when the system is in error.
- ■Working process: Service→ Backwash→ Brine & Slow Rinse→ Brine Refill→ Fast Rinse→Service.

C. Usage

After being accomplished installation, parameter setting and trail running, the valve could be put into use. In order to ensure the quality of outlet water can reach the requirement, the user should complete the below woks:

- DEnsure that there is solid salt all the time in the brine tank in the course of using when this valve is used for softening. The brine tank should be added the clean water softening salts only, at least 99.5% pure, forbidding use the small salt and iodized salt.
- Test the outlet water and raw water hardness at regular time. When the outlet water hardness is unqualified, please press the and the valve will temporary regenerate again (It will not affect the original set operation cycle.)
- 3When the feed water hardness change a lot, you can adjust the water treatment capacity as follow:

Press and hold both and for 5 seconds to lift the lock status. Press , and the light on, then press , the digital area show the control mode. If it shows A-01 or A-02, press three times, and the digital area will show the given water treatment capacity (If the control mode shows A-03 or A-04, then press four times, the digital area will show the feed water hardness); Press again, and digital flash. Press or continuously, reset the capacity value (Or water hardness). Press and hear a sound "Di" then finish the adjustment. Press exit and turn back the service status.


The estimation of water treatment capacity, you can refer to the professional application specification. When select A-03 or A-04 intelligent control mode, the control will automatically calculate the water treatment capacity by setting resin volume, feed water hardness and regeneration factor.


④For A-01 or A-03 control mode (Regeneration delayed type), please pay attention to whether the time is current or not. If the time is not right, you can adjust as follow: After lifting the lock status, press ② , the ② and ③ light on. Then press ② , the ② and hour value flash. Press ② or ⑦ continuously, reset the hour value; Press ② again, ② and minute value flash. Press ② or ⑦ continuously, reset the minute value; Press ② and hear a sound "Di", then finish the adjustment. Press ② exit and turn back the service status.

The regeneration parameters have been set when control valve left factory. Generally, it does not need to reset. If you want enquiry and modify the setting, you can refer to the professional application specification.

3. Applications


3.1. Softener Flow Chart

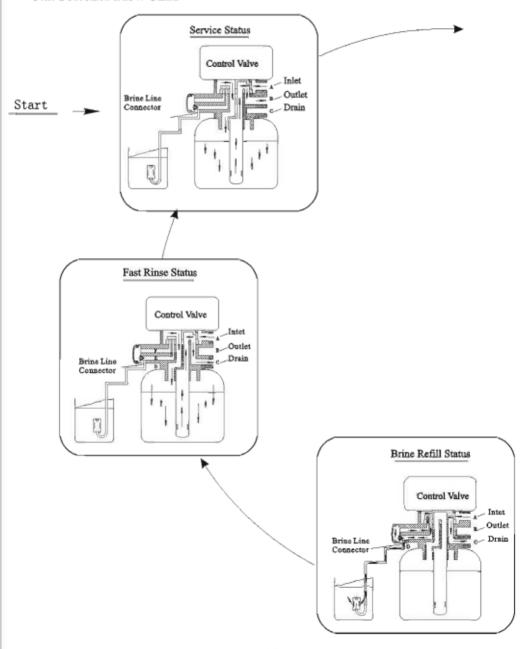

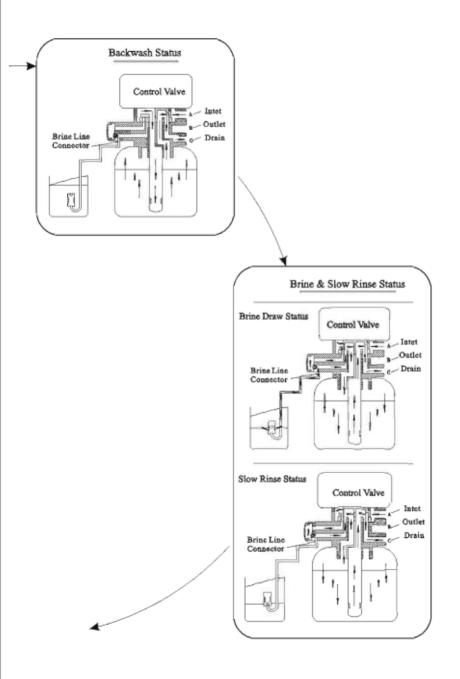

3.2. The Function and Connection of PC Board

Open the front cover of control valve, you will see the main control board and connection port as below:

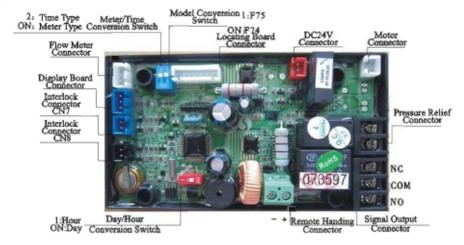

The main functions on main control board:

Function	Application	Explanation
Signal	Outlet solenoid valve	If system strictly require no hard water flow from outlet or controlling the liquid level in water tank.
output co- nnector b-01	Inlet pump	Increase pressure for regeneration or washing. Use the liquid level controller to control inlet pump to ensure there is water in tank.
Signal output connector b-02	Inlet solenoid valve or inlet pump	When inlet pressure is high, it needs to close water inlet when valve is rotating to protect motor.
Pressure relief connector	Control the inlet bypass to release pressure	When valve is rotating, pressure relief connector opened to prevent pressure increasing rapidly.
Interlock connector	To ensure not only one control valve regeneration or washing in system.	Use in RO Pre-treatment, water supply together but regeneration in turn. Second grade ion exchange equipment, etc.
Remote handling connector	Receipt signal to make the control rotate to next circle	It is used for on-line inspection system, PC connection, and realize automatically or remote controlling valve.

A. Signal Output Connector

- 1) Control Solenoid Valve (Set b-01)
- DSolenoid valve on outlet controls water level in brine tank.

Instruction: If system strictly require no hard water flow from outlet in regeneration cycle (Mainly for no hard water flow out when valve is switching or valve in backwash or brine drawing positions), a solenoid valve could be installed on outlet, the wiring refer to Figure 3-1:

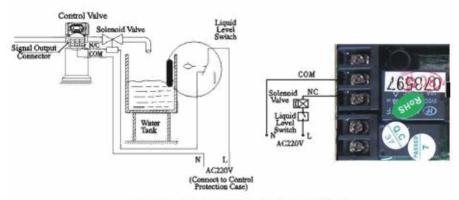


Figure 3-1 Wring of Solenoid Valve on Outlet

Function:

When valve in service status, if soft water tank is short of water, solenoid valve is open to supply soft water, but if water tank has enough water, solenoid valve is closed, so no soft water supplied.

When the valve is in backwash status, there is no signal output. So, solenoid valve is closed, and now water flow into soft water tank.

②Solenoid Valve on Inlet(Set b-02)

Instruction: When inlet pressure exceeds 0.6MPa, install a solenoid valve on inlet. Control mode is b-02. Pressure relieved when valve switching, the wiring refer to Figure 3-2. As Figure 3-3 shows, it also can use the pressure relief port to work.

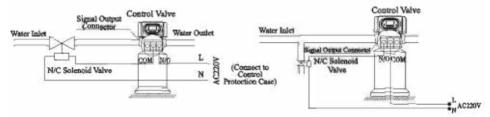


Figure 3-2 Wiring of Solenoid Valve on Inlet

Figure 3-3 Wiring of Pressure Relief Port

Function:

When inlet pressure is high, install a solenoid valve on inlet to ensure valve switching properly. When valve is exactly at position of Service, Backwash, Brine& Slow Rinse, Brine Refill and Fast Rinse, solenoid valve is open. When valve is switching, solenoid valve is closed, no water flow into valve to ensure valve switching properly. It could prevent the problem of mix water and water hammer.

Use interlock cable to realize valves in parallel and series in same system which is suited for RO pretreatment system or second grade Na*system. The Wiring refers to Figure 3-4:

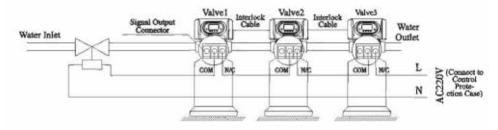


Figure 3-4 Wiring of Solenoid Vale in Inlet

2) Liquid Level Controller Controls Inlet Pump(Two-phase motor)(Set b-01) Instruction: For the system using well or middle-tank supplying water, switch of liquid level controller and valve together control pump opening or closing. The wiring refers to Figure 3-5:

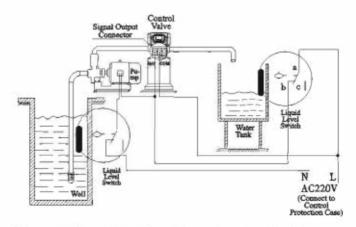


Figure 3-5 Wiring of Liquid Level Controller Controlling Inlet Pump

Function:

When valve in service status, if water tank is short of water, start up pump, but if water tank has enough water, the switch of liquid level controller is closed, so pump doesn't work.

When valve in regeneration cycle, inlet always has water no matter what is water condition in water tank. As Runxin valve no water pass outlet in regeneration cycle, it ensure no water fill into brine tank. A liquid switch at the top opening of well or in middle water tank in RO system protect pump from working without water in case of out of raw water.

Liquid Level Switch in Water Tank Controls Inlet pump (Three-phase, Figure 3-6) (Set b-01)

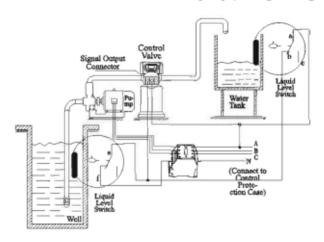
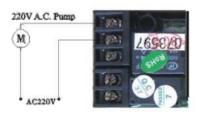


Figure3-6Wiring of Liquid Level Switch in Water Tank Controls 380V Inlet Pump

4) Control Inlet Booster Pump(Set b-01 or b-02)

Instruction: If inlet water pressure is less than 0.15MPa, which makes rinse drawing difficult, a booster pump is suggested to be installed on inlet. Control mode b-01. When system in regeneration cycle, booster pump is open, the wiring refers to Figure 3-7. If the booster pump current is bigger than 5A, system need to install a contactor, the wiring refers to Figure 3-8.



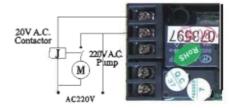


Figure 3-7Wiring of Booster Pump on Inlet

Figure 3-8 Wiring of Booster Pump on Inlet

B. Interlock

Instruction:

In the parallel water treatment system, it ensure only one valve in regeneration or washing cycle and (n-1) valves in service, that is, realizing the function of supplying water simultaneously and regenerating individually.

In the series and parallel water treatment system(Second grade Na* Exchanger or RO pre-treatment system), it ensure only one valve in regeneration or washing cycle and there is/are water(s) in service. The wiring refers to Figure 3-9.

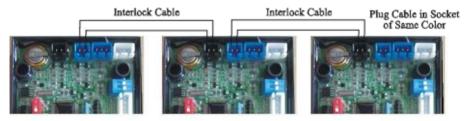


Figure 3-9 Network System Wiring with Interlock Cable

Note: Use Interlock Cable to connect CN8 to CN7 on next valve in the loop. One system with several valves, if interlock cable is disconnected, the system is divided into two individual system.

C. Pressure Relief Output

Runxin valve will cut off feeding water to drain line when it switches in regeneration cycles. Thus in some water treatment system, e.g. Deep Well, one booster pump was installed on the inlet to increase the system water feeding pressure, this cut-off will cause pressure on inlet rising too fast to damage the valve. Pressure Relief Output can be used to avoid this problem. The wiring refer to Figure 3-10

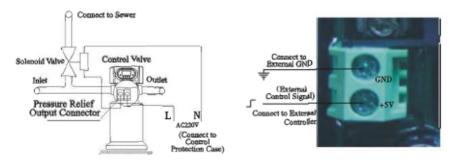


Figure 3-10 Wiring of Pressure Relief Output

Figure 3-11 Wiring of Remote Input

D. Remote Handling Connector

Online TDS meter monitors treated water other than a flow meter, or PLC controls the regeneration time. When the controller receives a contact closure from above instruments, regeneration begins. The wiring refers to Figure 3-11:

E. Interlock System

2 or more than 2 valves are interlocked connecting in one system and all valves are in service but regenerate individually. The wiring refer to Figure 3-12.

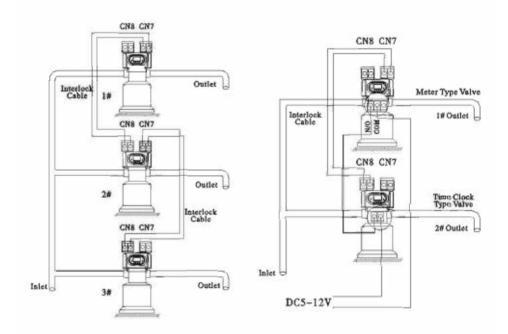


Figure 3-12 Interlock system

Figure 3-13 Series system

F. Series System

This is a 2 or more than 2 valves system, all in service, with one flow meter for the entire system. For the time type valve, the regeneration time should be set and adjusted to the Max; for the meter type valve, connect its signal output connector with the remote handle connector of the time clock type valve. That can realize the function of supplying water simultaneously and regenerating orderly. The wiring refer to Figure 3-13:

3.3. System Configuration and Flow Rate Curve

A. Product Configuration


Product configuration with tank, resin volume, brine tank and injector

Tank Size (mm)	Resin Volume (L)	Flow Rate (t/h)	Brine Tank Size (mm)	The Minimum Salt Consumption for Regeneration (Kg)	Injector Model
ф 500 × 1800	200	5.0	ф 740 × 1275	30.00	7401
ф 600 × 1800	300	7.0	ф 740 × 1275	45.00	7403
ф 750 × 1800	450	11.0	ф 840 × 1335	67.50	7404

Attention: The flow rate calculation is based on linear velocity 25m/hr; the minimum salt consumption for regeneration calculation is based on salt consumption 150g /L (Resin).

B. Flow Rate characteristic

1). Pressure-flow rate curve

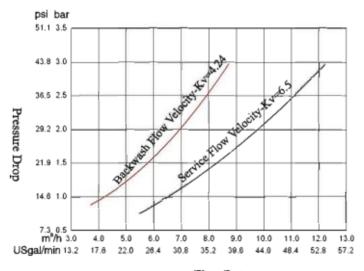

Flow Rate

2) . Injector parameter table

Inlet Pressure	Draw Rate (L/M)						
Mpa	7401 Coffee	7402 Pink	7403 Yellow	7404 Blue			
0.15	10.61	13.86	16.08	25.02			
0.20	13.00	16.60	19.32	29.37			
0.25	14.47	18.17	21.30	32.91			
0.30	16.00	20.00	23.40	36.20			
0.35	17.28	21.64	25.19	38.73			
0.40	18.55	23.33	26.98	41.43			

3). Configuration for Standard Injector and Drain Line Flow Control


Tank Dia.	Injector Model	Injector Color	Draw Rate	Slow Rinse	Brine Refill	DLFC	Backwash / Fast Rinse	
mm	Wiodei	Color	L/m	L/m	L/m		L/m	
500	7401	Coffee	16.0	10.56	23	1#	46.3	
550	7402	Pink	20.0	13.88	28.2	2#	67	
600	7403	Yellow	23.4	15.75	32.9	3#	71	
750	7404	Blue	36.2	24.17	50.5	4#	75	


Remark: Above data for the product configuration and relevant characteristics are only for reference. When put in practice, please subject to the different requirements of raw water hardness and application.

3.4. Parameter settlement

①Service timeT1

Water treatment capacity:

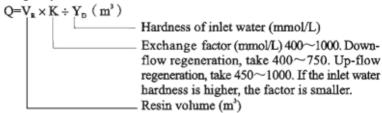

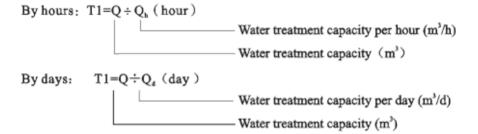

②Backwash time T2

It is subject to the turbidity of inlet water. Generally, It is suggested to be set $10\sim15$ minutes. The higher the turbidity is, the longer backwash time can be set. However, if the turbidity is more than 5FTU, it should be better to install a filter in front of the exchanger.

(3) Brine& Slow rinse time T3

$$T3=(40\sim50)\times H_R \text{ (min.)}$$

Generally, T3=45H_R (min.)

In this formula, H. The height of resin in exchange tank (m.)

Brine refill time T4

Down-flow regeneration: T4=0.45×V_B ÷ Brine refill speed (min.)

Up-flow regeneration: T4=0.34×V_R÷Brine refill speed (min.)

In this formula, V_R—— Resin volume (m³)

The Brine refill speed is related to inlet water pressure. It is suggested to lengthen 1~2 minutes of calculated brine refilling time to make sure there is enough water in tank.

(The condition is that the there is a level controller installed in the brine tank)

⑤Fast rinse time T5

Generally, the water for fast rinse is $3\sim6$ times of resin volume. It is suggested to be set $10\sim16$ minutes, but subject to the outlet water reaching the requirement.

®Exchange factor

Exchange factor = $E/(k \times 1000)$

In this formula, E—Resin working exchange capability (mol/m³), it is related to the quality of resin. Down-flow regeneration, take 800~900. Up-flow regeneration, take 900~1200.

K—— Security factor, often take $1.2\sim2$. It is related to the hardness of inlet water: the higher the hardness is, the bigger the K is.


⑦Regeneration time: The whole cycle for generation is about two hours. Please try to set up the regeneration time when you don't need water according to the actual situation.

The calculation of parameters for each step is only for reference, the actual proper time will be determined after adjusting by water exchanger supplier. This calculation procedure of softener is only for industrial application; it is not suitable for small softener in residential application.

3.5. Parameter Enquiry and Setting

(1) Parameter Enquiry

When ξ light on, press and hold \mathcal{O} both \mathcal{O} and for 5 seconds to lift the button lock statues; then press \mathcal{O} and \mathcal{O}_{ξ} light on, enter into program display mode; press \mathcal{O} or \mathcal{O} to view each value according to below process. (Press \mathcal{O} exit and turn back to service status)

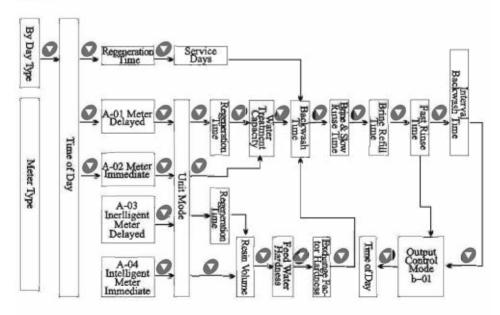

3.5.2.Parameter Setting

In program display mode, press and enter into program set mode. Press or to adjust the value.

3.5.3. The steps of parameter setting

Items	Process steps	Symbol
Time of Day	When time of day "12:12" continuously flash, it reminds to reset; 1. Press to enter into program display mode; both and symbol light on, ": " flash; Press , both and hour value flash, through or to adjust the hour value; 2. Press again, both and minute value flash, through or to adjust the minute value; 3. Press and hear a sound "Di", then finish adjustment, press to turn back.	Ø &
Con- trol Mode	A-03 or A-04 control mode.	R - D 1
Reg- ener- ation Time		0 2:0 0
tment Cap-	1. In water treatment capacity display status, it shows and 80.00. Press and enter into program set mode. And 80.00 flash; 2. Press or to adjust the water treatment capacity value (m³); 3. Press then finish adjustment, press to turn back.	8 0.00 ·

	1. In resin volume display status, it shows 100L. Press and and enters into program set mode. had 100 value flash; 2. Press or to adjust the volume value(L); 3. Press and hear a sound "Di", then finish adjustment, press to turn back.	100.
Feed Water Hard- ness	1. In feed water hardness display status, it shows yd1.2. Press and enter into program set mode. and 1.2 value flash; 2. Press or to adjust the hardness value (mmol/L); 3. Press and hear a sound "Di", then finish adjustment, press to turn back.	9 d 1.2 €
Exch- ange Factor	2 Press or or or adjust the exchange factor value.	RL.55
Back- wash Time	1. In backwash time display status, it shows in and 2-10. Press and and enter into program set mode. and 10 flash; 2. Press or to adjust the backwash time (minute); 3. Press then finish adjustment, press to turn back.	₹ · 18,
Brine & Slow Rinse Time	1. In brine& slow rinse time display status, it shows and 3-60. Press and enter into program set mode. and 60 flash; 2. Press or to adjust the brine time(minute): 3. Press then finish adjustment, press to turn back.	3 · S D.

Brine Refill Time	2. Press or to modify the brine refill time:	Ч- 85. ₩ 8
Fast Rinse Time	 In fast rinse time display status, it shows <u>III</u> and 5-10. Press ② and enter into program set mode. and 10 flash; Press ③ or ② to adjust the fast rinse time; Press ③ then finish adjustment, press ⑤ to turn back. 	5 - 10, <u>m</u>
Maxi- mum Inte- rval Rege- nera- tion Days	2. Press or to adjust the Interval regeneration days; 3. Press and hear a sound "Di", then finish	× - 3 0,
Signal Output Mode	Z. Press or or lo adjust the p-02:	P - 0 1

For example, the fast rinse time of a softener is 12 minutes. After regeneration, the chloridion in the outlet water is always higher than normal, indicating that there is not enough time for fast rinse. If you want the time to set to 15 minutes, the modification steps as follows:

①Press and hold both ② and ② to lift the button lock statues (& light off):

②Press 📵, and 🗞 light on;

③Press O or O continuously until \(\mathbb{U}\) light on. Then the digital area shows: 5-12M;

Press , and 12 flash;

⑤Press @ continuously until 12 changed to 15:

®Press , there is a sound "Di" and the figure stop flashing; the program back to enquiry status.

The first service of the steps from and quit from the enquiry stat, the display will show the current service status.



3.6. Trial Running

After installing the multi-functional flow control valve on the resin tank with the connected pipes, as well as setting up the relevant parameter, please conduct the trail running as follows:

- A. Close the inlet valve B & C, and open the bypass valve A. After cleaning the foreign materials in the pipe, close the bypass valve A. (As Figure 1-3 shows)
- B. Fill the brine tank with the planned amount of water and adjust the air check valve. Then add solid salt to the tank and dissolve the salt as much as possible.
- C. Switch on power. Press and go in the Backwash position; when illight on, slowly open the inlet valve B to 1/4 position, making the water flow into the resin tank; you can hear the sound of air-out from the drain pipeline. After all air is out of pipeline, then open inlet valve B completely and clean the foreign materials in the resin tank until the outlet water is clean. It will take 8~10 minutes to finish the whole process.
- D. Press , turning the position from Backwash to Brine Slow Rinse; light on and enter in the process of Brine Slow Rinse. The air check valve close when control valve finished sucking brine, then slow rinse start to work. It is about 60~65minutes for whole process.
- F. Press , turning to Fast Rinse position. III light on and start to fast rinse. After 10~15minutes, take our some outlet water for testing: if the water hardness reach the requirement, and the chloridion in the water is almost the same compared with the inlet water, then go to the next step.
- G. Press , making the control valve return to Service Status; light on and start to running.

Note:

- If water inflow too fast, the media in tank will be damaged. When water inflow slowly, there is a sound of air emptying from drain pipeline.
- After changing resin, please empty air in the resin according to the above Step C.
- In the process of trial running, please check the water situation in all position, ensuring there are no resin leakage.
- The time for Backwash, Brine& Slow Rinse, Brine Refill and Fast Rinse position can be set and executed according to the calculation in the formula or suggestions from the control valve suppliers.

3.7. Trouble-Shooting

A. Control Valve Fault

Problem	Cause	Correction
1.Softener fails to reg- enerate.	A. Electrical service to unit has been interrupted. B. Regeneration cycles set incorrect. C. Controller is defective. D. Motor fails to work.	A. Assure permanent electrical service (Check fuse, plug, pull chain or switch). B. Reset regeneration cycles. C. Replace controller. D. Replace motor.
2.Regenera- tion time is not correct.	A. Time of Day not set correctly. B. Power failure more than 3 days.	Check program and reset time of day.
3.Softener supply hard water.	A. Bypass valve is open or leaking. B. No salt in brine tank. C. Injector plugged. D. Insufficient water flowing into brine tank. E. Leak at O-ring on riser pipe. F. Internal valve leak. G. Regeneration cycles not correct. H. Shortage of resin. I. Bad quality of feed water or turbine blocked.	A. Close or repair bypass valve. B. Add salt to brine tank and maintain salt level above water level. C. Change or clean injector. D. Check brine tank refill time. E. Make sure riser pipe is not cracked. Check o-ring and tube pilot. F. Change valve body. G. Set correct regeneration cycles in the program. H. Add resin to mineral tank and check whether resin leaks. I. Reduce the inlet turbidity, clean or replace turbine.
4.Softener fails to draw brine.	A. Line pressure is too low. B. Brine line is plugged. C. Brine line is leaking. D. Injector is plugged. E. Internal control leak. F. Drain line is plugged. G. Sizes of injector and DLFC not match with tank.	A. Increase line pressure. B. Clean brine line. C. Replace brine line. D. Clean or replace new parts. E. Replace valve body. F. Clean drain line flow control. G. Select correct injector size and DLFC according to the P20 requirements.
5.Unit used too much salt.	A. Improper salt setting. B. Excessive water in brine tank.	A. Check salt usage and salt setting. B. See problem no.6.

Control Valve Fault

6.Excessive water in brine tank.	A. Overlong refilling time. B. Foreign material in brine line. C. Foreign material in brine valve and plug drain line flow control. D. Not install safety brine valve but power failure whiling salting. E. Safety brine valve breakdown.	A. Reset correct refilling time. B. Clean brine line. C. Clean brine valve and brine line. D. Stop water supplying and restart prinstall safety brine valve in salt tank. E. Repair or replace safety brine valve.
7.Pressure lost or iron in conditioned water.	A. Iron in the water supply pipe. B. Iron mass in the softener. C. Fouled resin bed. D. Too much iron in the raw water.	A. Clean the water supply pipe. B. Clean valve and add resin cleaning chemical, increase frequency of regeneration. C. Check backwash, brine draw and brine tank refill. Increase frequency of regeneration and backwash time. D. Iron removal equipment is required to install before softening.
8.Loss of mineral through drain line.	A. Air in water system. B. Bottom strainer broken. C. Improperly sized drain line control.	A. Assure that well system has proper air eliminator control. B. Replace new bottom strainer. C. Check for proper drain rate.
9.Control cycle continuously.	A. Locating signal writing breakdown. B. Controller is faulty. C. Foreign material stuck the driving gear. D. Time of regeneration steps were set to zero.	A. Check and connect locating signal wiring. B. Replace controller. C. Take out foreign material. D. Check program setting and reset.
10.Drain flows continuously.	A. Internal valve leak. B. When electricity fails to supply, valve stops backwash or rapid rinse position.	A. Check and repair valve body or replace it. B. Adjust valve to service position or turn off bypass valve and restart when electricity supply.
11.Interupted or irregular brine.	A. Water pressure too low or not stable. B. Injector is plugged or faulty. C. Air in resin tank. D. Floccules in resin tank during backwash.	A. Increase water pressure. B. Clean or replace injector. C.Check and find the reason. D. Clean the flocules in resin tank.
12. Water flow out from drain or brine pipe after regeneration.	A. Foreign material in valve which makes valve can't be closed completely. B. Hard water mixed in valve body. C. Water pressure is too high which result in valve doesn't get the right position. D. Under the Backwash position, pipelines between the outlet and brine line are communicated.	A. Clean foreign material in valve body. B. Change valve core or sealing ring. C. Reduce water pressure or use pressure release function. D. Install a check Valve, solenoid valve in front of the outlet or install a liquid level controller in the brine tank.

Control Valve Fault


13.Salt water in soften water.	A. Foreign material in injector or injector fails to work. B. Brine valve cannot be shut-off. C. Time of rapid rinse too short.	A. Clean and repair injector. B. Repair brine valve and clean it. C. Extend rapid rinse time.
14.Unit capacity decreases.	A. Unit fails to regenerate or regenerate not properly. B. Fouled resin bed. C. Salt setting not proper. D. Softener setting not proper. E. Raw water quality deterioration. F. Turbine of flow meter is stuck.	A. Regenerate according to the correct operation requirement. B. Increase backwash flow rate and time, clean or change resin. C. Readjust brine drawing time. D. According to the test of outlet water, recount and reset. E. Regenerate unit by manual temporary then reset regeneration cycle. F. Disassemble flow meter and clean it or replace a new turbine.

B. Controller Fault

Problem	Cause	Correction
All indictors display on front panel.	A. Wiring of front panel with controller fails to work. B. Control board is faulty. C. Transformer damaged. D. Electrical service not stable.	A. Check and replace the wiring. B. Replace control board. C. Check and replace transformer. D. Check and adjust electrical service.
2. No display on front panel.	A. Wiring of front panel with controller fails to work. B. Front panel damaged. C. Control board damaged. D. Electricity is interrupted.	A. Check and replace wiring. B. Replace front panel. C. Replace control board. D. Check electricity.
3. E1 Flash	A. Wiring of locating board with controller fails to work. B. Locating board damaged. C. Mechanical driven failure. D. Faulty control board. E. Wiring of motor with controller is fault. F. Motor damaged.	A. Replace wiring. B. Replace locating board. C. Check and repair mechanical part. D. Replace control board. E. Replace wiring. F. Replace motor.
4. E2 Flash	A. Hall component on locating board damaged. B. Wiring of locating board with controller fails to work. C. Control board is faulty.	A. Replace locating board. B. Replace wiring. C. Replace control board.
5. E3 or E4 Flash	A. Control board is faulty.	A. Replace control board,

3.8. Assembly & Parts


N74A3 (63610) Valve Body Assembly

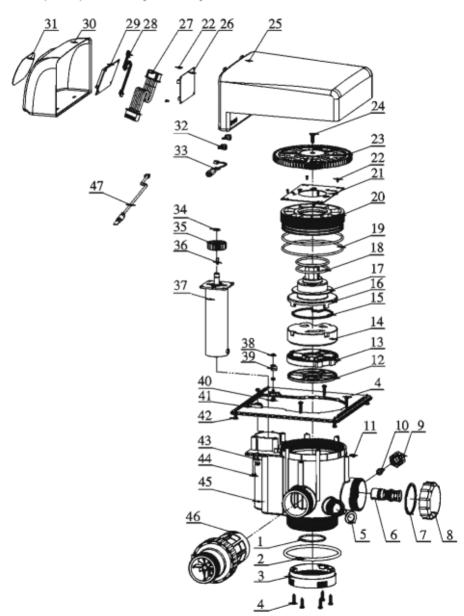

Component and part No. for N74A3/N74A1 (Components for N74A1 without No.46 and No.47)

Item No.	Description	Part Number	Quan- tity	Item No.	Description	Part Number	Quan- tity
1	O-ring 48.9×2.62	8378071	1	25	Dust Cover	8005010	1
2	O-ring 104.6×5.7	8378146	1	26	Control Board	6382027	1
3	Connector	8458018	1	27	Wire for Locating Board	5511002	1
4	Screw, Cross	8909003	8	28	Wire for Display Board	5512001	1
24	ST3.9×16 Drain Line	102224		29	Display Board	6381003	1
5	Flow Control	8468010	1	30	Front Cover	8300017	1
6	Injector	5468014	1	31	Label	8865016	1
7	O-Ring	8371004	1	32			2
8	Cover, Injector	8315006	1	-	Cable Clip	8126004	2
9	Hexagonal Nut	75250000000	1	33	Wire for power	5513001	1
10		8940016	-	34	Pin	8994009	1
	Tube Screw, Cross	8457025	1	35	Small Gear	8241008	1
11	ST2.9×9.5	8909008	1	36	Bolt C4×12	8971001	1
12	Seal Ring	8370016	1	37	Motor	6158036	1
13	Fix Disk	8469010	3	38	Hexagonal Nut	8940002	3
14	Moving Disk	8459011	1	39	Line clip	8126002	1
15	Moving Seal Ring	8370018	1	40	Screw, Cross	8902007	1
16	Shaft	8258005	1		M4×20		_
17	Anti-friction Washer	8216006	1	41	Connecting Board	8152007	1
18	O-ring 59.92×3.53	8378110	2	42	Screw, Cross ST3.9×16	8909016	4
19	O-ring 117.6×3.55	8378133	2	43	Screw, Cross M4×12	8902005	1
20	Fitting Nut	8092032	1	44	Screw, Cross	8902012	4
21	Locating Board	6380015	1		M4×36.5 Valve Body	*******	-
22	Screw, Cross ST2.2×6.5	8909004	6	45	(ABS+GF10) Valve Body	8022052	1
22	2000	F847507			(PPO+GF10)	8022053	1
23	Gear	5241004	1	46	Flow Meter	5447003	1
24	Screw, Cross ST4.8×19	8909018	1	47	Probe Wire	6386001	1


5447003 Flow Meter Connector

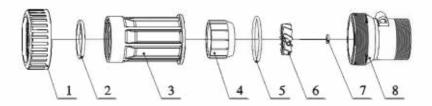

5447003 Flow Meter Connector and Part Number

Item No.	Description	Part Number	Quan- tity	Item No.	Description	Part Number	Quan- tity
1	Animated nut	8947004	1	6	Impeller	5436005	1
2	O-ring	8371008	1	7	Bush	821002	1
3	Connector	8458016	1	8	shell	8002702	1
4	Toggle	8109006	1				
5	O-ring 60×4	8378137	1				


5458002 Side Connector Structure Chart

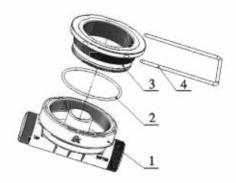

5458002 Side Connector Description and Part Number

Item No.	Description	Part Number	Quan- tity	Item No.	Description	Part Number	Quan tity
1	Adapter	8458037	1	3	Connector	8457017	1
2	O-ring110×4.5	8378140	1	4	Steel Fork	8271003	1

F74B3 (63510B) Structure Chart:

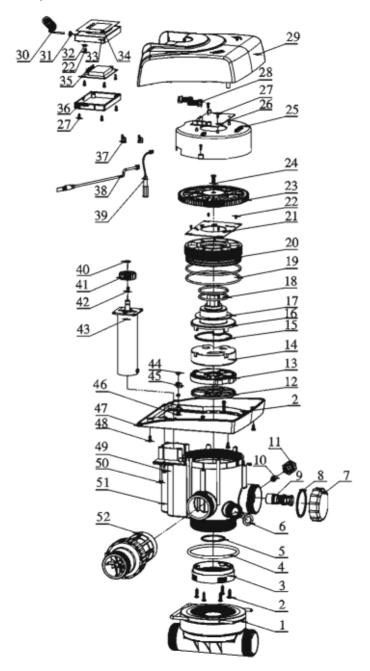

Spare Parts Description and Part No. for F74B3/F74B1 (without No.38 and No.52 for F74B1)

Item No.	Description	Part Number	Quan- tity	Item No.	Description	Part Number	Quan- tity
1	Side Connector	5458002	1	28	Wire for Locating Board	5511002	1
2	Screw, Cross ST3.9×16	8909003	8	29	29 Dust Cover		1
3	Connector	8458018	1	30	30 Three Core Spring Line		1
4	O-ring 104.6×5.7	8378146	1	31	Bushings	8126006	1
5	O-ring 48.9×2.62	8378071	1	32	Wire Clip	8126001	1
6	Drain Line Flow Control	8468010	1	33	Front Box	8300025	1
7	Cover, Injector	8315006	1	34	Label	8865023	1
8	O-ring	8371004	1	35	Display Board	6381003	1
9	Injector	5468013	1	36	Cover	8315016	1
10	Tube	8457025	1	37	Buckle	8126004	2
11	Hexagonal Nut	8940016	1	38	Probe Wire	6386002	1
12	Seal Ring	8370016	1	39	Wire for Power	5513001	1
13	Fix Disk	8469010	1	40	Pin	8994009	1
14	Moving Disk	8459011	1	41	Small Gear	8241008	1
15	Moving Seal Ring	8370018	1	42	BoltC4×12	8971001	1
16	Shaft	8258005	1	43	Motor	6158036	1
17	Anti-friction Washer	8216006	1	44	Hexagonal Nut	8940002	3
18	O-ring 59.92×3.53	8378110	2	45	Buckle	8126002	1
19	O-ring 117.6×3.55	8378133	2	46	Screw, Cross M4×20	8902007	1
20	Fitting Nut	8092005	1		2 739 445 5	22222	
21	Locating Board	6380015	1	47	Connecting Board	8152007	1
22	Screw, Cross ST2.2×6.5	8909004	6	48	Screw, Cross ST3.9×16	8909016	4
23	Gear	5241004	1	49	Screw, Cross M4×12	8902005	1
24	Screw, Cross ST4.8×19	8909018	1	50	Screw, Cross M4×36.5	8902012	4
25	Fixed Base	8109004	1	-	(ABS+GF10)	8022052	1
26	Control Board	6382027	1	51	Valve Body (PPO+GF10)	8022053	1
27	Screw, Cross ST2.9×9.5	8909008	15	52	Flow Meterv	5447003	1

4. Warranty Card

Dear client:

This warranty card is the guarantee proof of RUNXIN brand multi-functional flow control valve. It is kept by client self. You could get the after-sales services from the supplier which is appointed by RUNXIN manufacturer. Please keep it properly. It couldn't be retrieved if lost. It couldn't be repaired free of charge under the below conditions:

- 1. Guarantee period expired.(One year):
- 2. Damage resulting from using, maintenance, and keeping that are not in accordance with the instruction:
- 3. Damage resulting from repairing not by the appointed maintenance personnel;
- 4. Content in guarantee proof is unconfirmed with the label on the real good or be altered;
- 5. Damage resulting from force majeure.

Product Name	Multi-functional Flow Control Valve for Water Treatment Systems						
Model		Code of Valve Body					
Purchase Company Name		Tel/Cel.					
Problem							
Solution							
Date of Repairing	Date of Accomplishment	Maintenance Man Signature					

When product need warranty service, please fill in the below content and sent this card together with the product to the appointed suppliers or Runxin company.

card together with the produc	t to the	appointed su	ppners or	Kunxiii compan	ıy.	
End-user Company Name			Tel/Cel.			
Purchase Company Name	63		Tel/Cel.			
Model		Code of Valve Body				
Tank Size φ ×	Resin Tank Size		L	Raw Water Hardness	mmol/L	
Water Source: Ground-water□ Tap Water□	Water Treatment Capacity		m'	Backwash Time	min	
Brine & Slow Rinse Time min	Brine Refill Time		min	Fast Rinse Time	min	
Problem Description						



